




CUPERTINO SANITARY DISTRICT

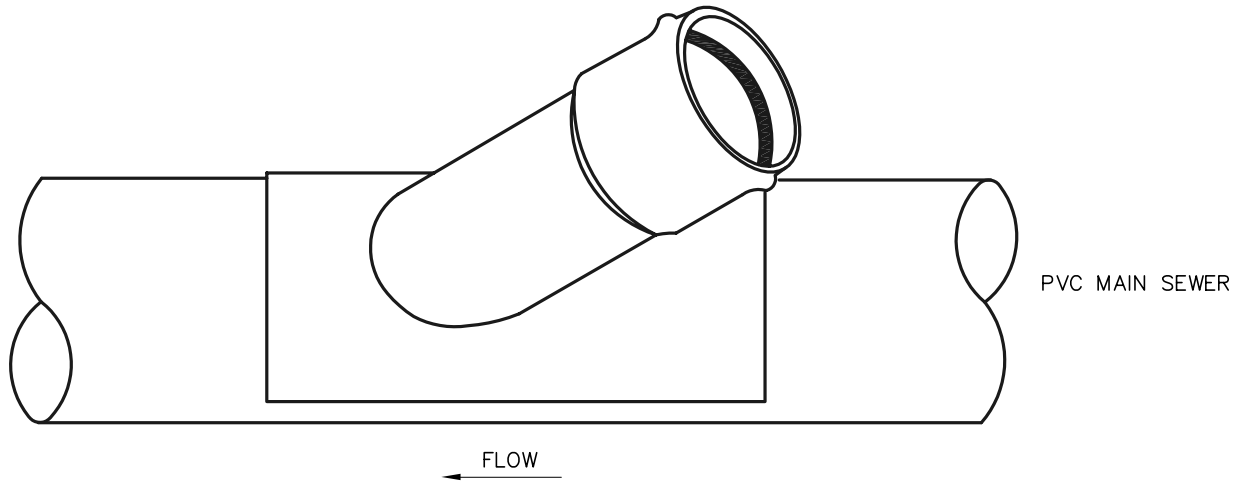

NOTES:

(ASSEMBLY SHALL BE IN ACCORDANCE WITH ASTM RECOMMENDED PRACTICE D2855)

1. SAW HOLE IN PIPE.
2. USE PVC SOLVENT-CEMENT ON BOTH SURFACES.
3. PLACE SADDLE ON PIPE SURFACE, LINING UP WYE OUTLET WITH HOLE.
4. REMOVE EXCESS SOLVENT AT BASE OF WYE.

FILE NO.
SP-248

STANDARD SOLVENT WELD WYE INSTALLATION

DETAIL H

DR. BY: HJP DATE: 05/13/03

CK. BY: DMT DATE: 05/14/03

APPROVED. BY:

DATE: 5-15-03